



See Back For Notes



MICROAIRE DAF® AERATION UNIT
TROUBLESHOOTING FLOW CHART
(P/N 0001-2511)

NOTES

Note 1: Air compressor set range should be 140-160 PSI

Note 2: If unable to adjust rotameter: Check for plugged or faulty rotameter, plugged or faulty water activated pilot valve, plugged or faulty air lines or plugged air injector.

Note 3: If unable to adjust differential pressure: Check for damaged diaphragms in break out valves and/or damaged pressure gauges (damage to breakout valves is evident by fluid dripping from seep hole in valve).

Note 4: Check pressure gauges by closing all break out valves and by closing vent valve. Once closed, both pressure gauges should read near equal pressure. If pressure gauges do not read near equal pressure, as a single unit, remove the gauges and diaphragm housing and check for obstruction in the port on the diaphragm housing. Replace gauges if necessary.



840 Clark Drive
Gladstone, MI 49837
1-800-VanAire